

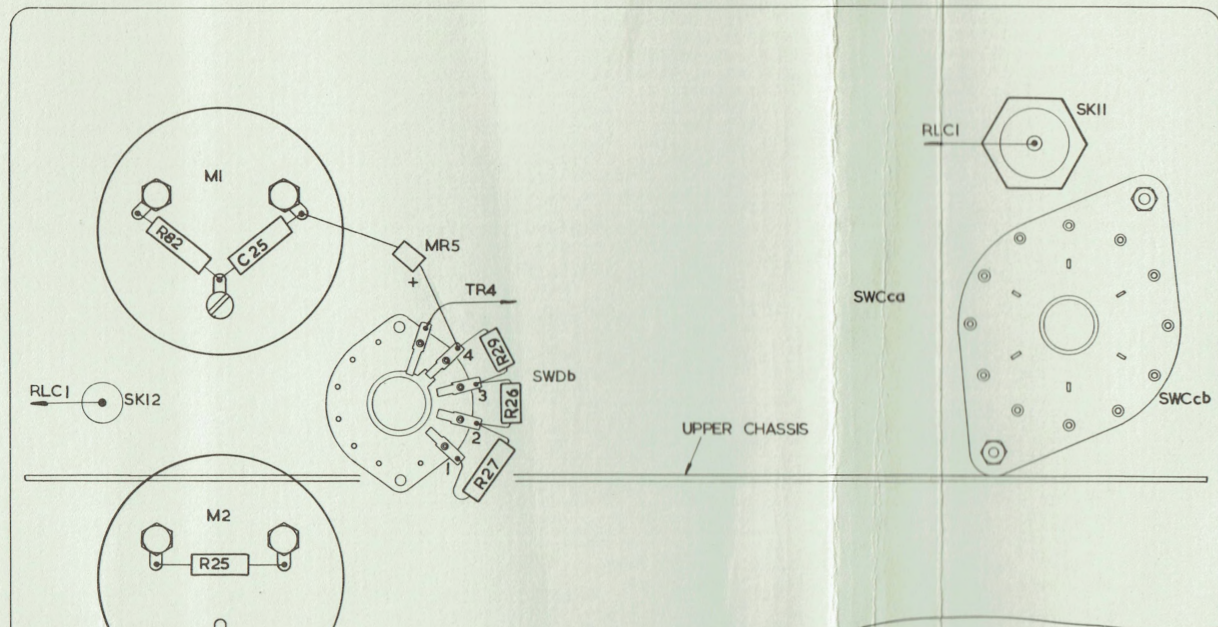


R	82	25	29	26	27	72	75	82	R							
C	25					68	65	64	24	22	25	C				
MISC	SK12	M1 M2	MR5	SWDb		SK11	SWC		RLC2 RLC 2	RLC1 SWCc SWCa SK11	L10	SWBg SWBh	L9 L8	SWDb SWDa	TR3 TR 4 M1	MISC

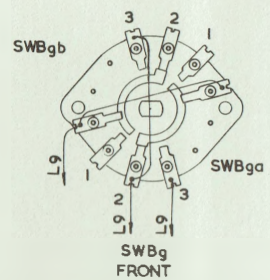


UPPER CHASSIS


PART VIEW ON REAR OF FRONT PANEL

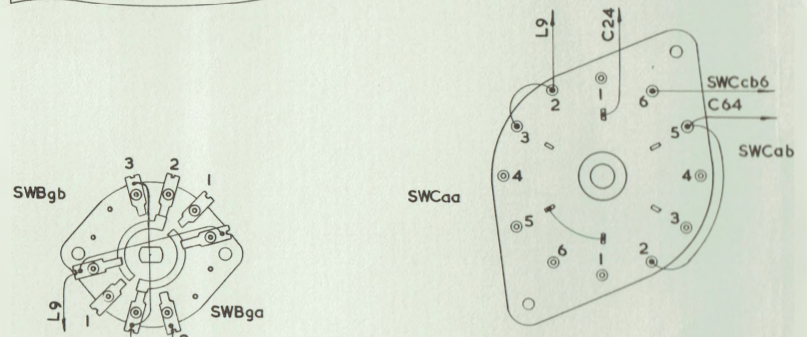


PART OF SWB. FREQUENCY RANGE

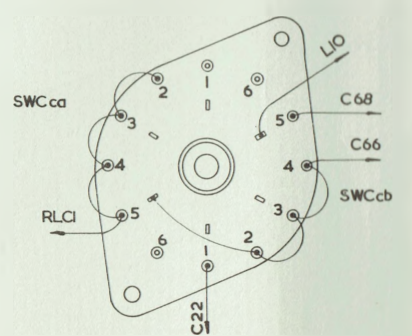

SWC
AE CAPACITOR & DUMMY LOAD

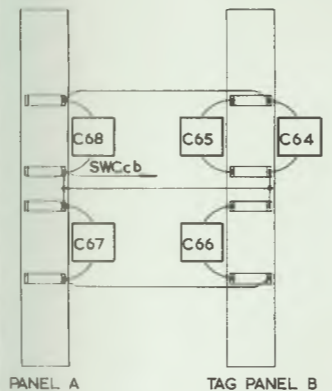

SCRAP VIEW IN DIRECTION OF ARROW 'B'

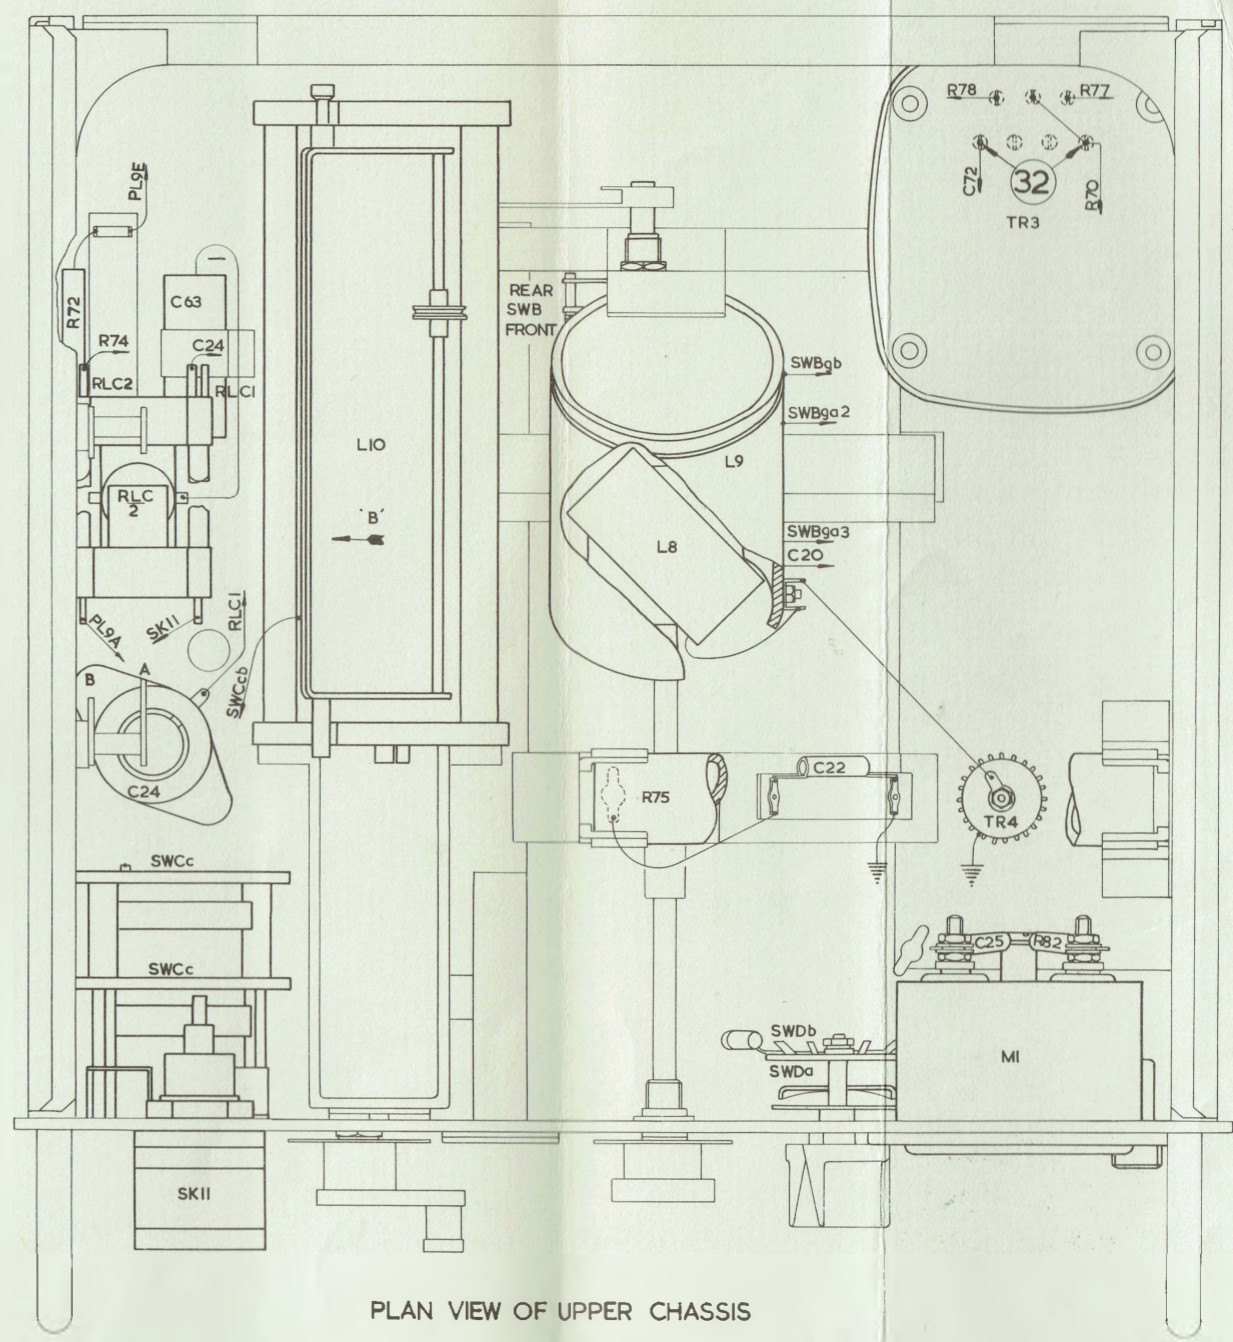

PLAN VIEW OF UPPER CHASSIS

TRANSMITTER H.F. AP. 100333
LAYOUT & SWITCH WIRING DIAGRAM
(SHEET 2)