

RECEIVER H.T. AND L.T. SUPPLIES AND BATTERY CHARGING CIRCUITS

TW12A

RECEIVER H.T. AND L.T. SUPPLIES AND BATTERY CHARGING CIRCUITS

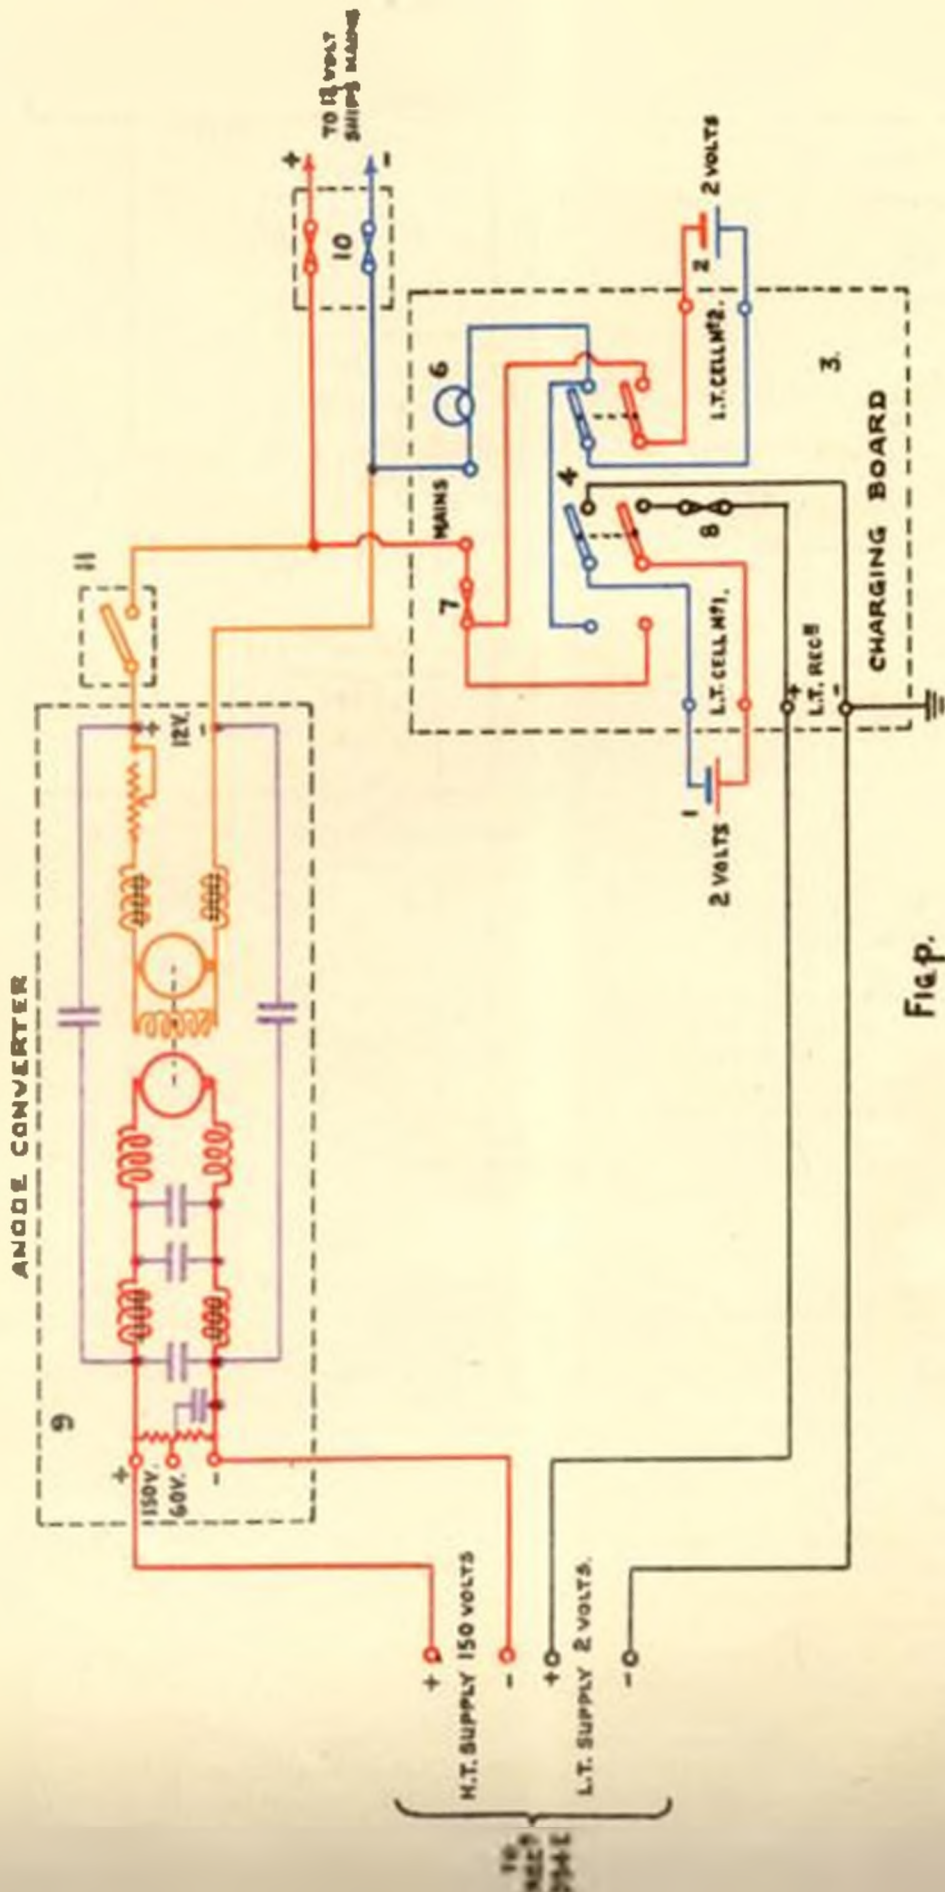


Fig.

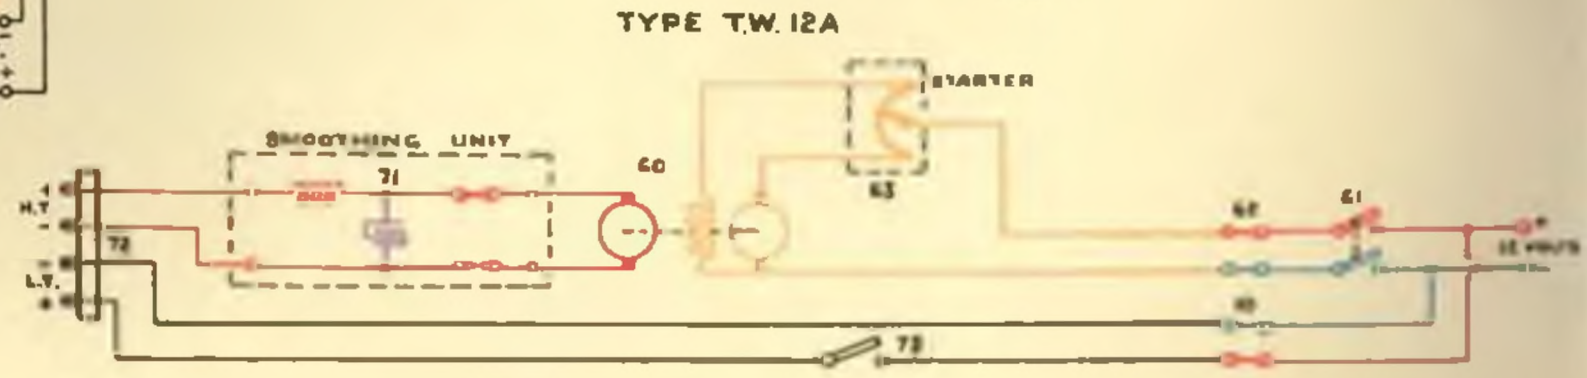
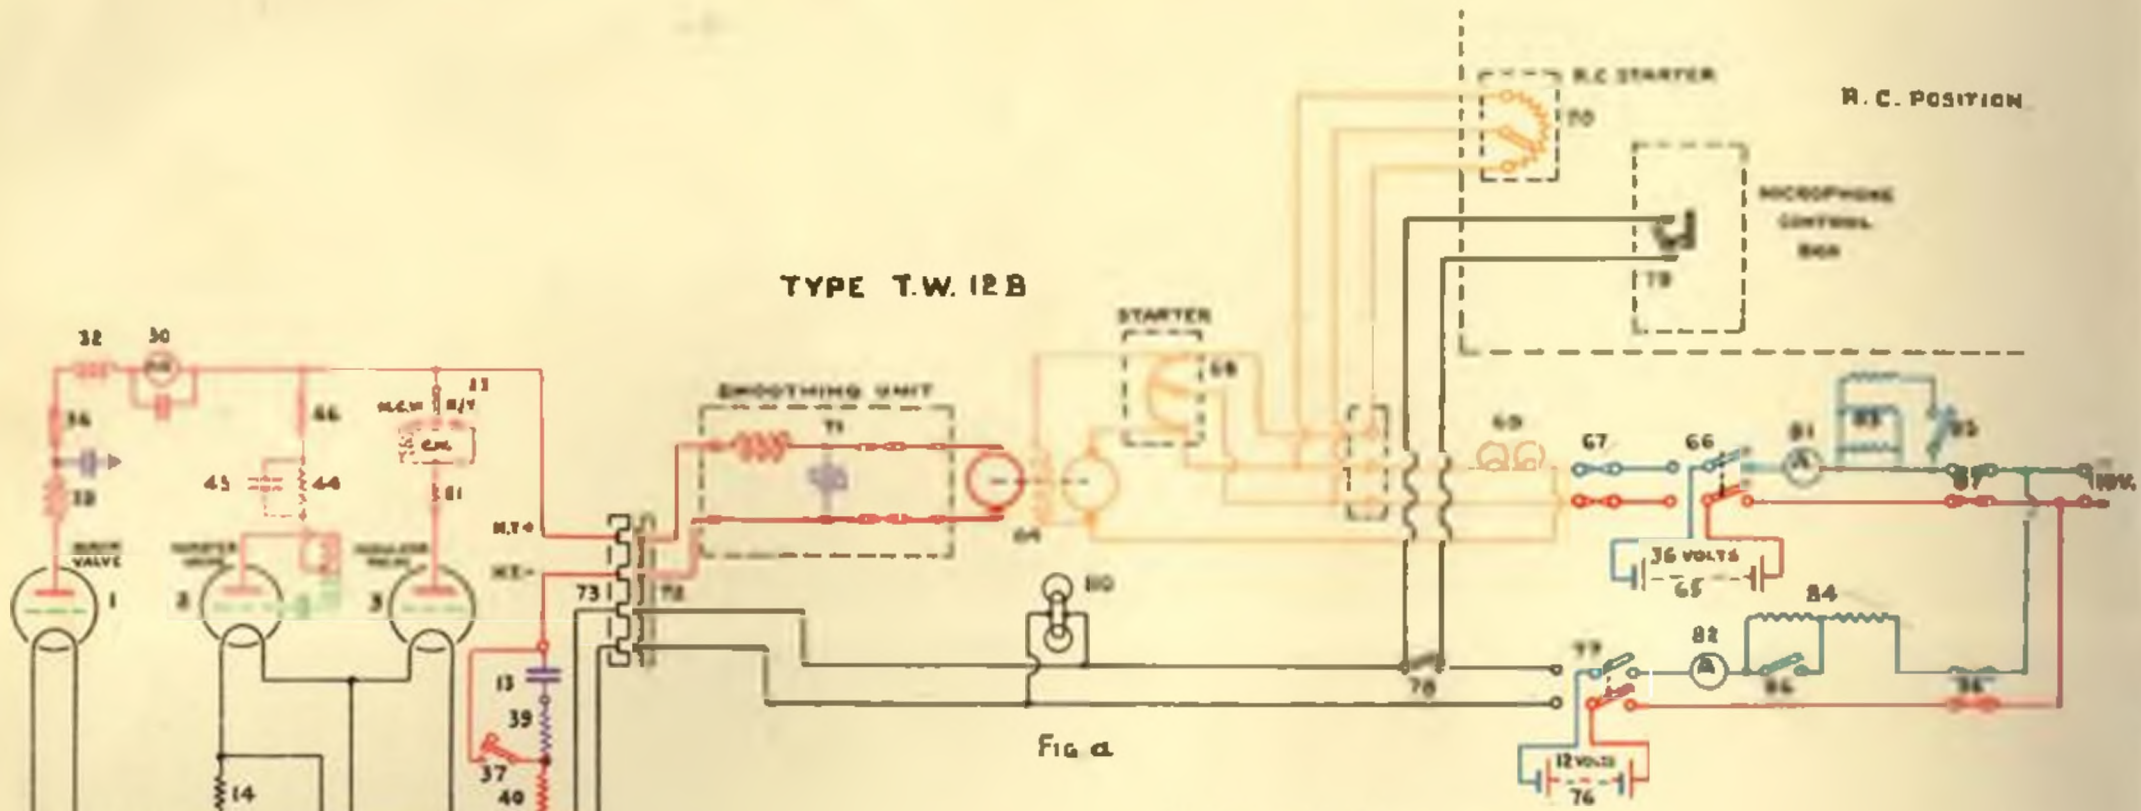


Fig. 3.

R. C. POSITION

MICROPHONE CONTROL BOX

R.C. STARTER

STARTER

SMOOTHING UNIT

STARTER

SMOOTHING UNIT

6X4

6X3

6X3

6X5

H.T.+

H.T.-

L.T.

H.T.

L.T.

67

66

81

83

85

87

89

91

100V.

36 volts

65

84

86

88

90

79

82

84

86

88

90

12 volts

76

STARTER

68

SMOOTHING UNIT

71

64

80

69

70

78

79

82

84

86

88

90

12 volts

76

TYPE T.W. 12A

STARTER

60

63

SMOOTHING UNIT

71

60

63

62

61

110V.

73

Fig. b.