


# TYPE 91 PANEL 3AM


## FRONT VIEW

3

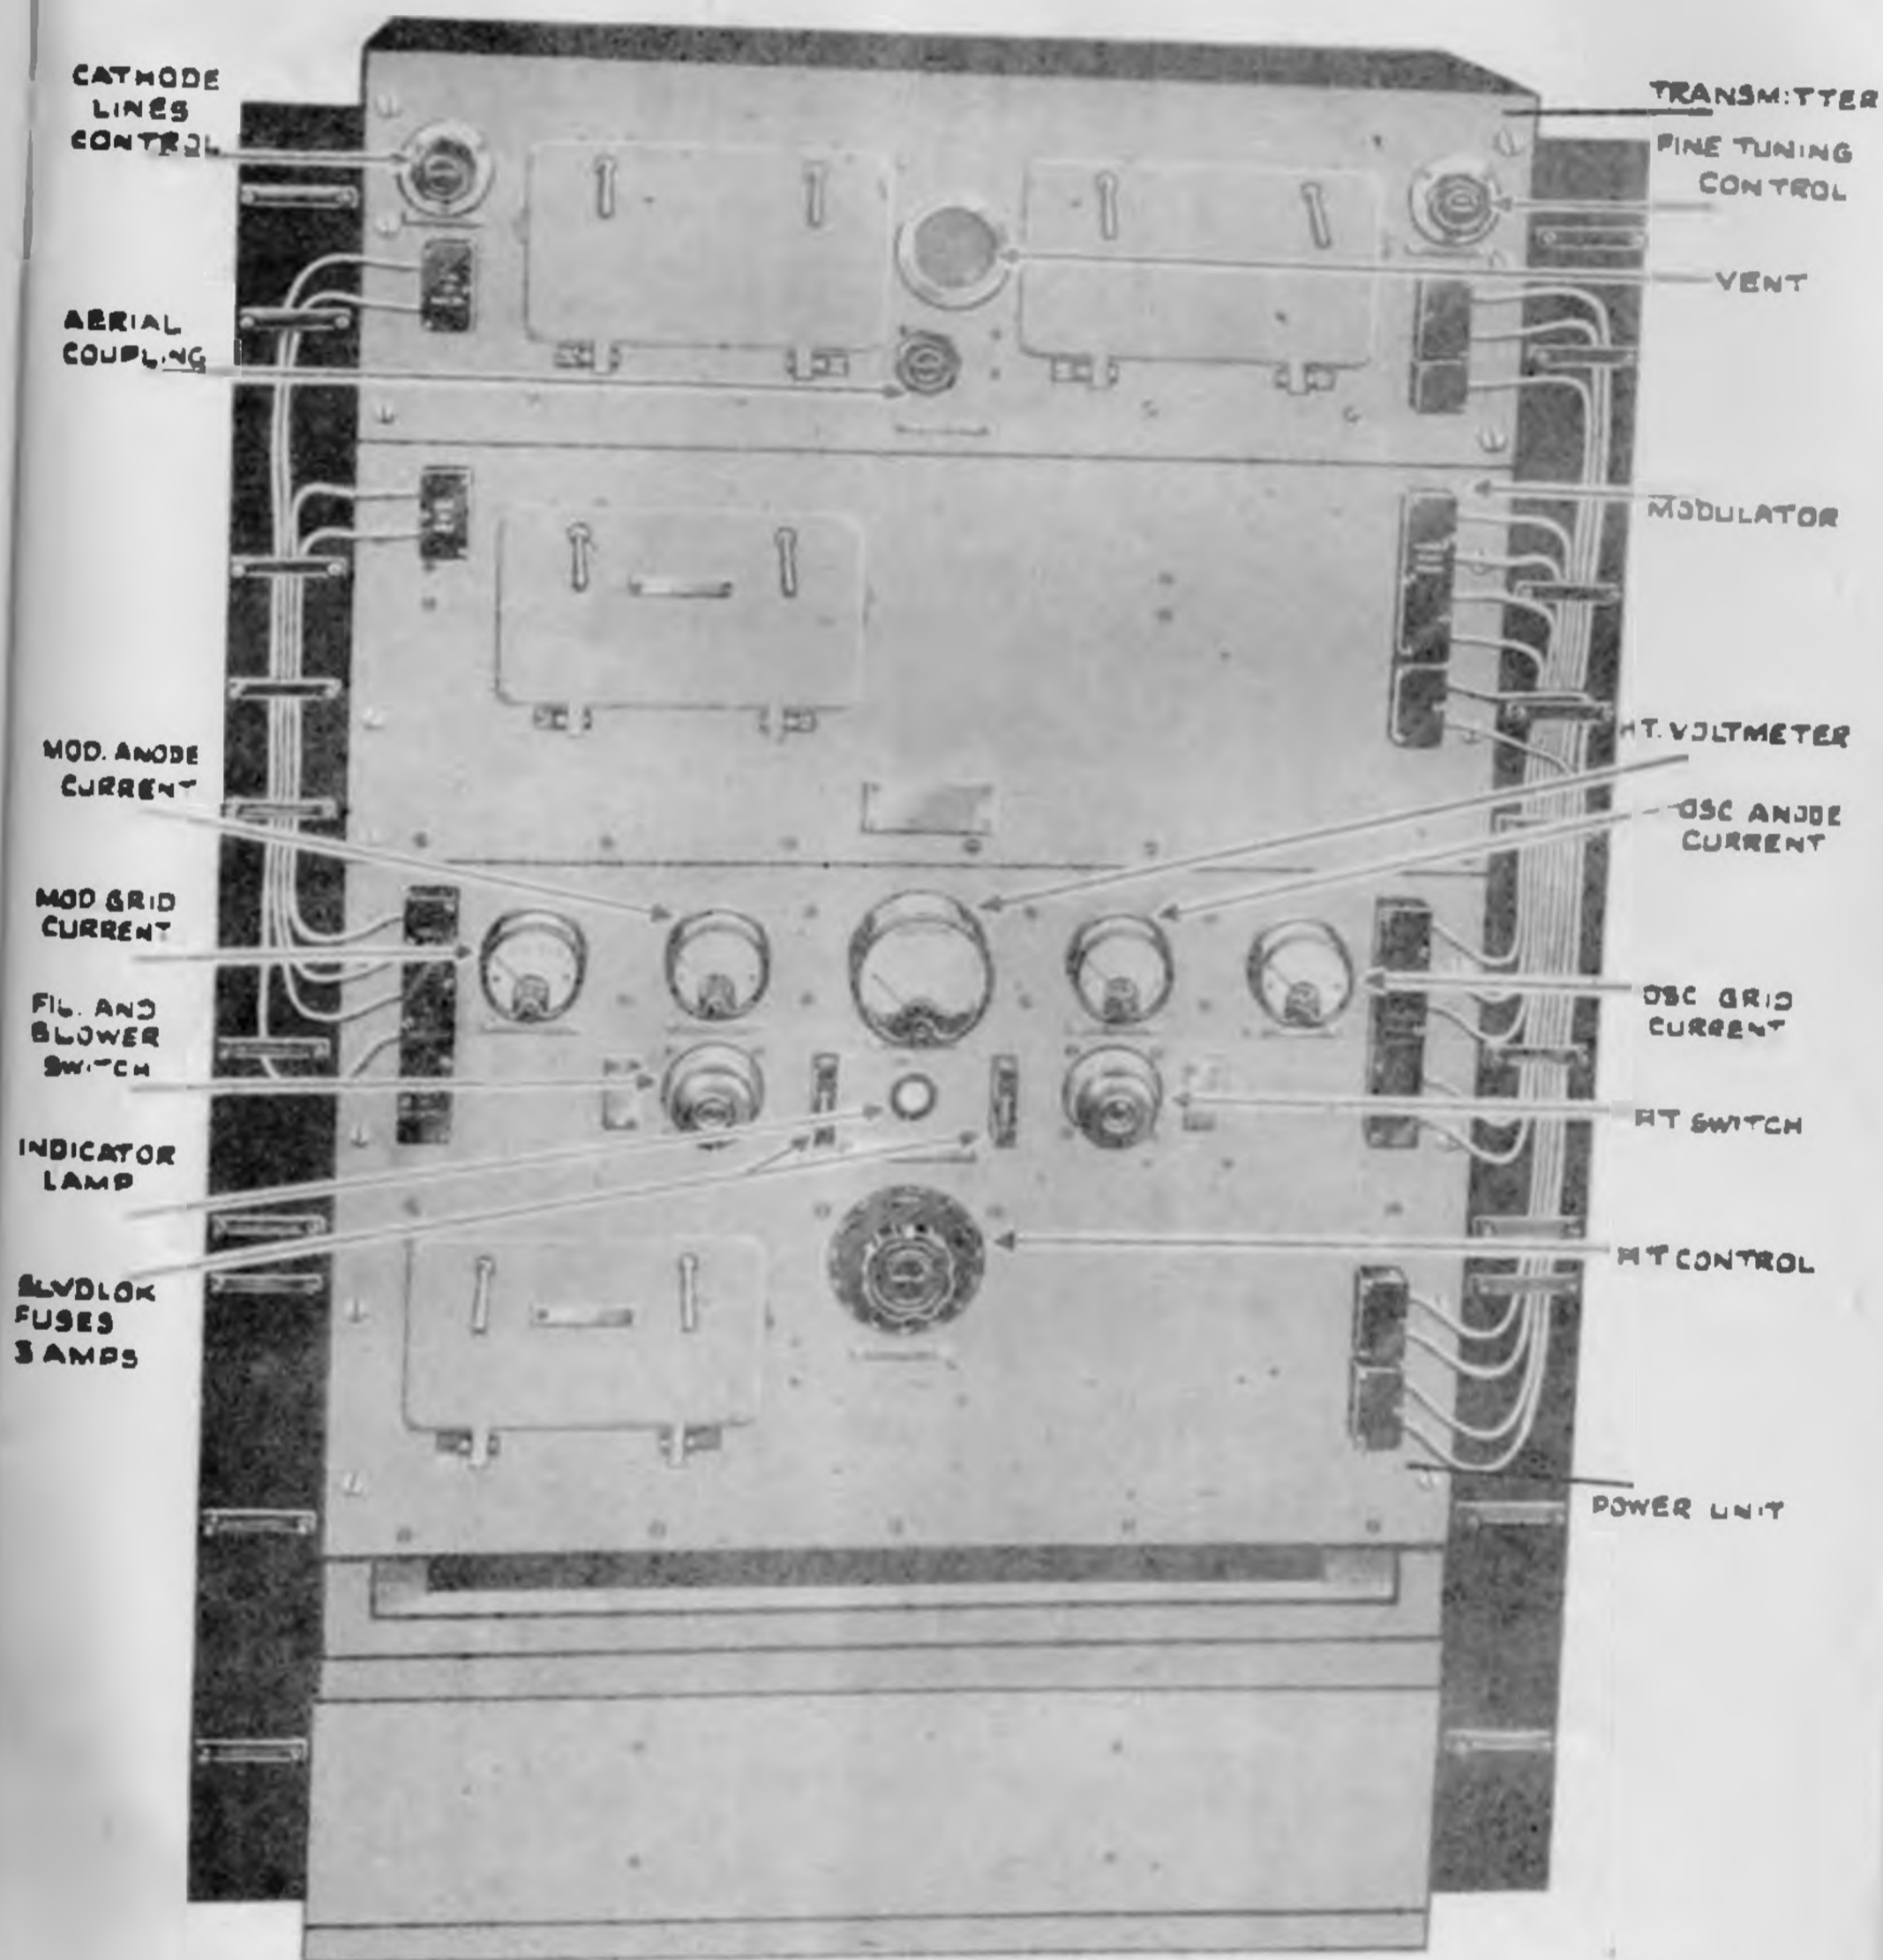


# OUTFIT TYPE 91

## COMPLETE WIRING DIAGRAM

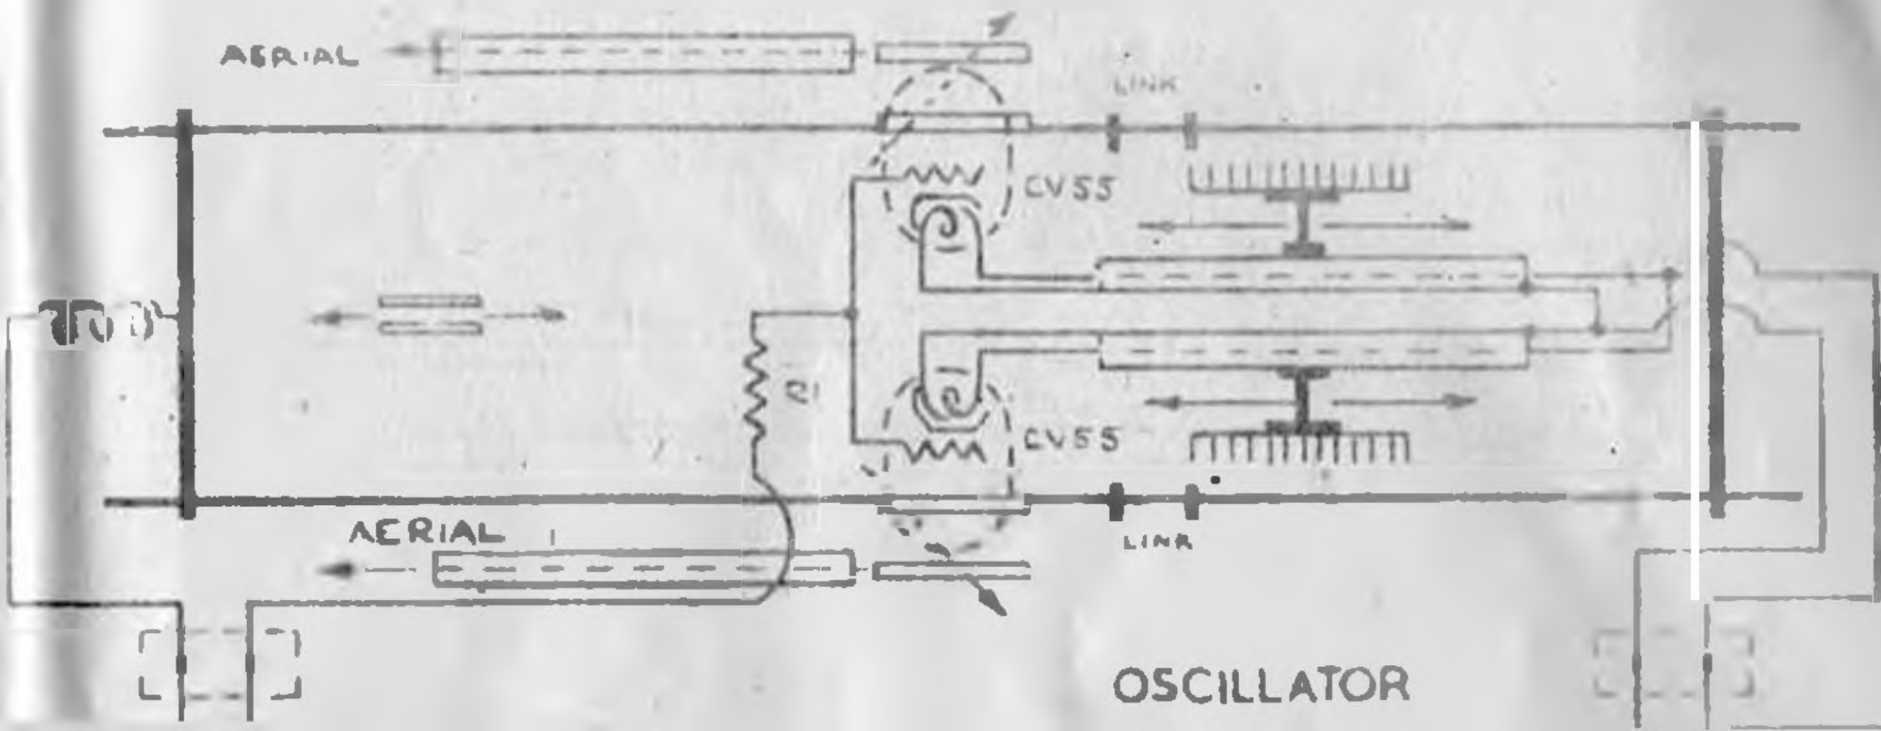


# OUTFIT TYPE 91

## COMPLETE WIRING DIAGRAM

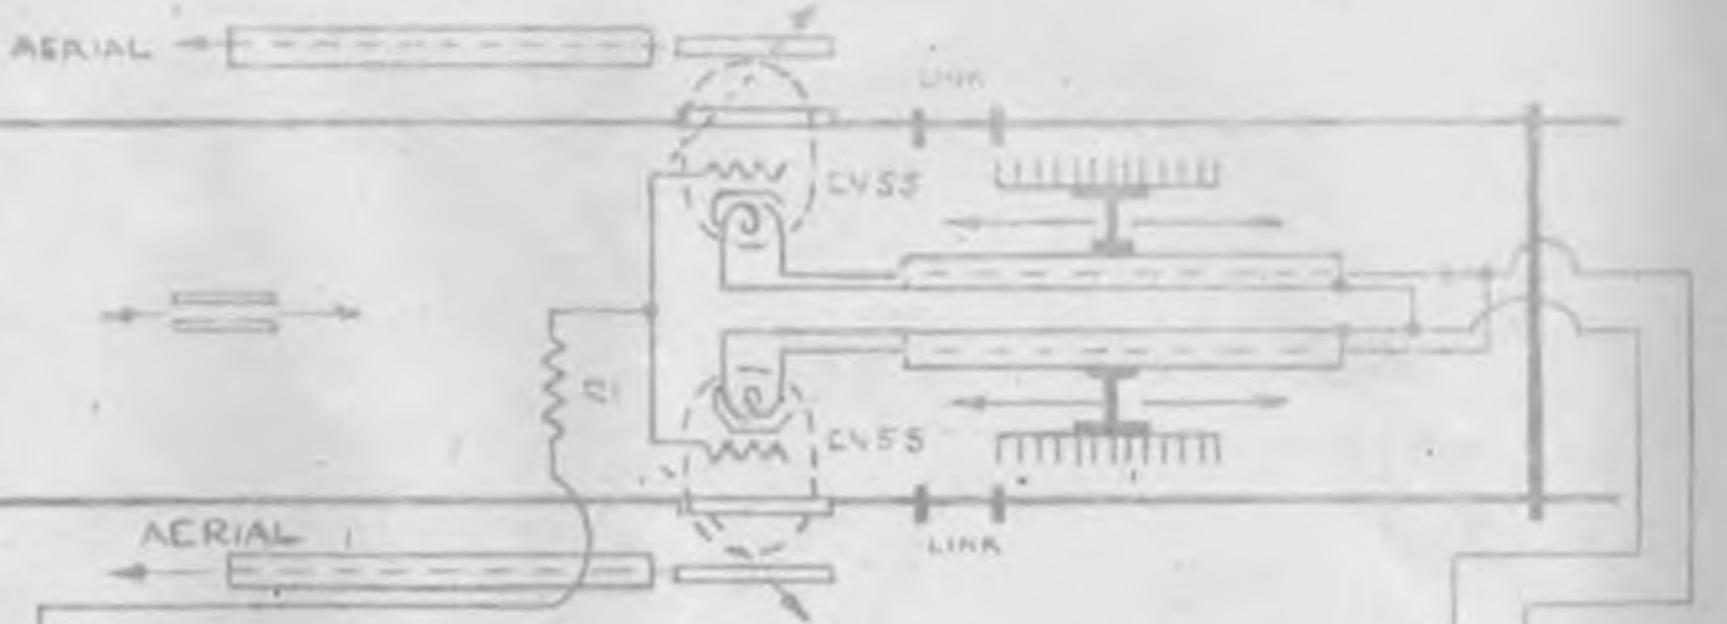


### OSCILLATOR

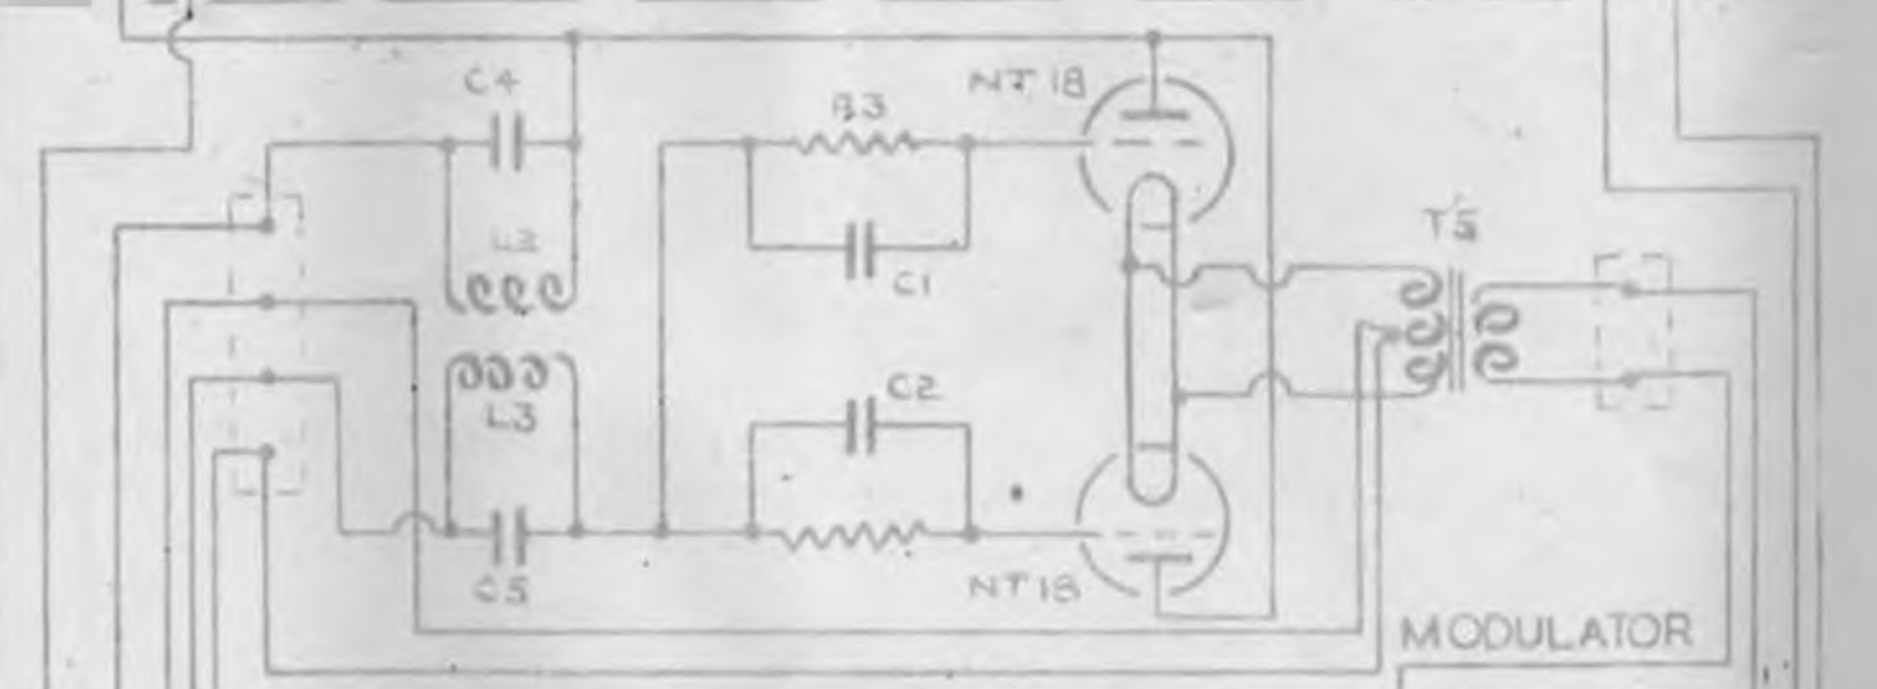


### MODULATOR



230V 50

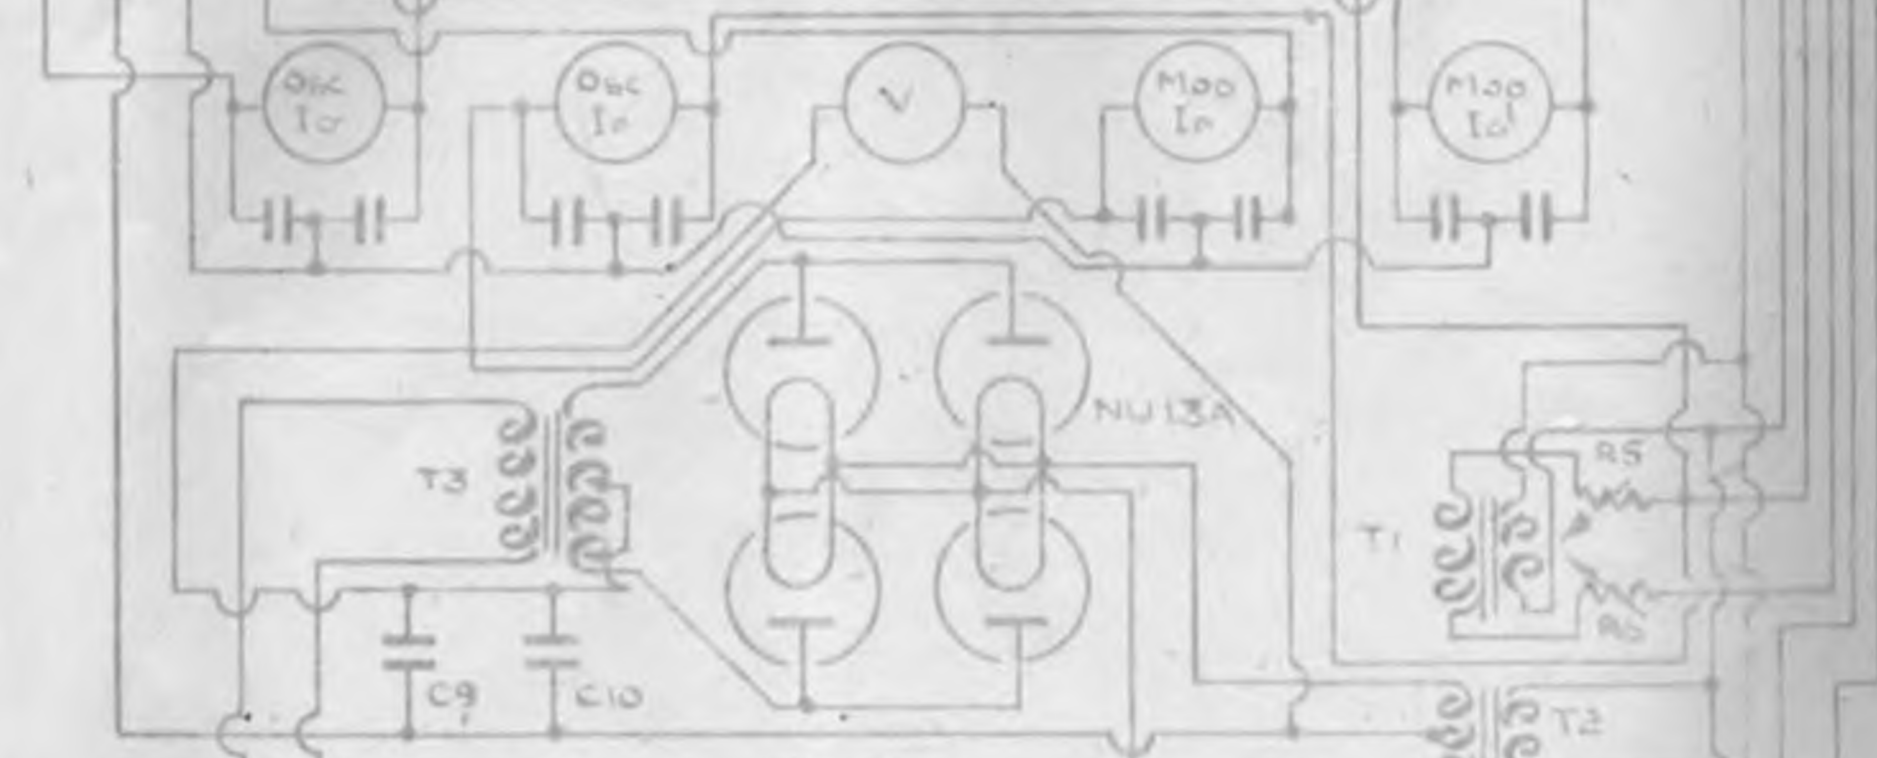


### POWER UNIT

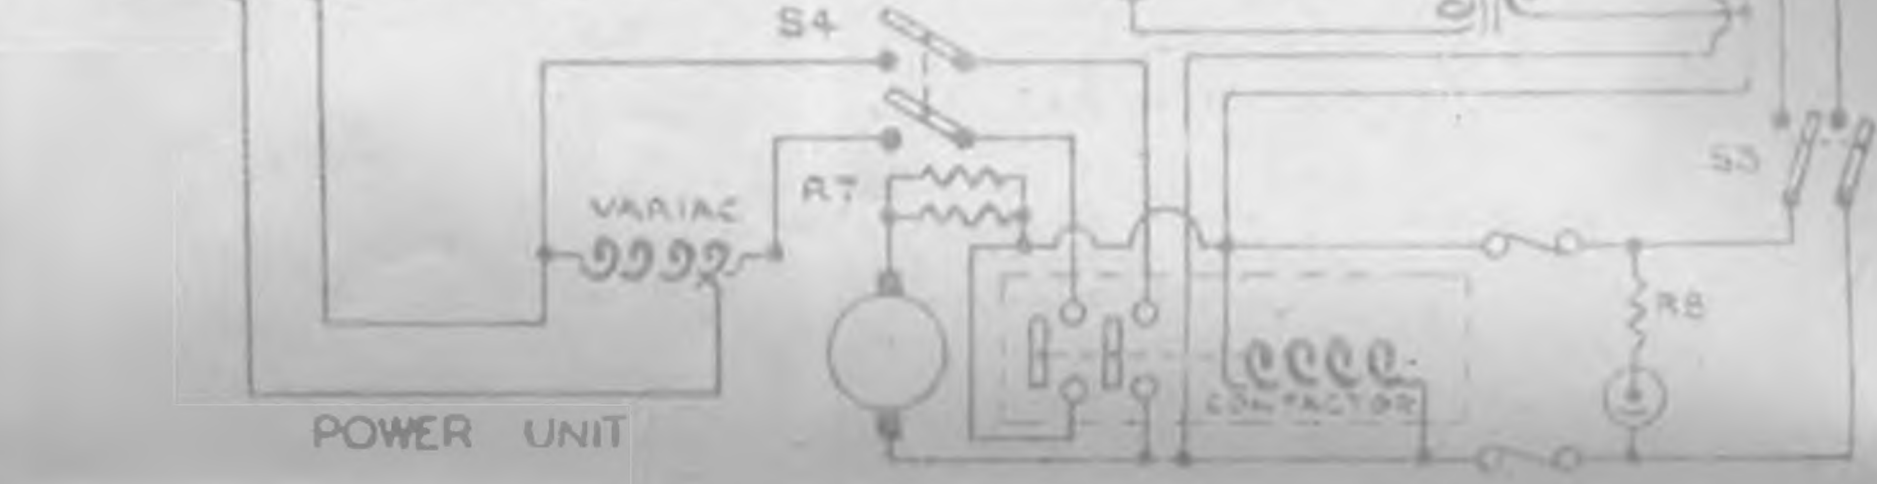



# SCHEMATIC LAYOUT

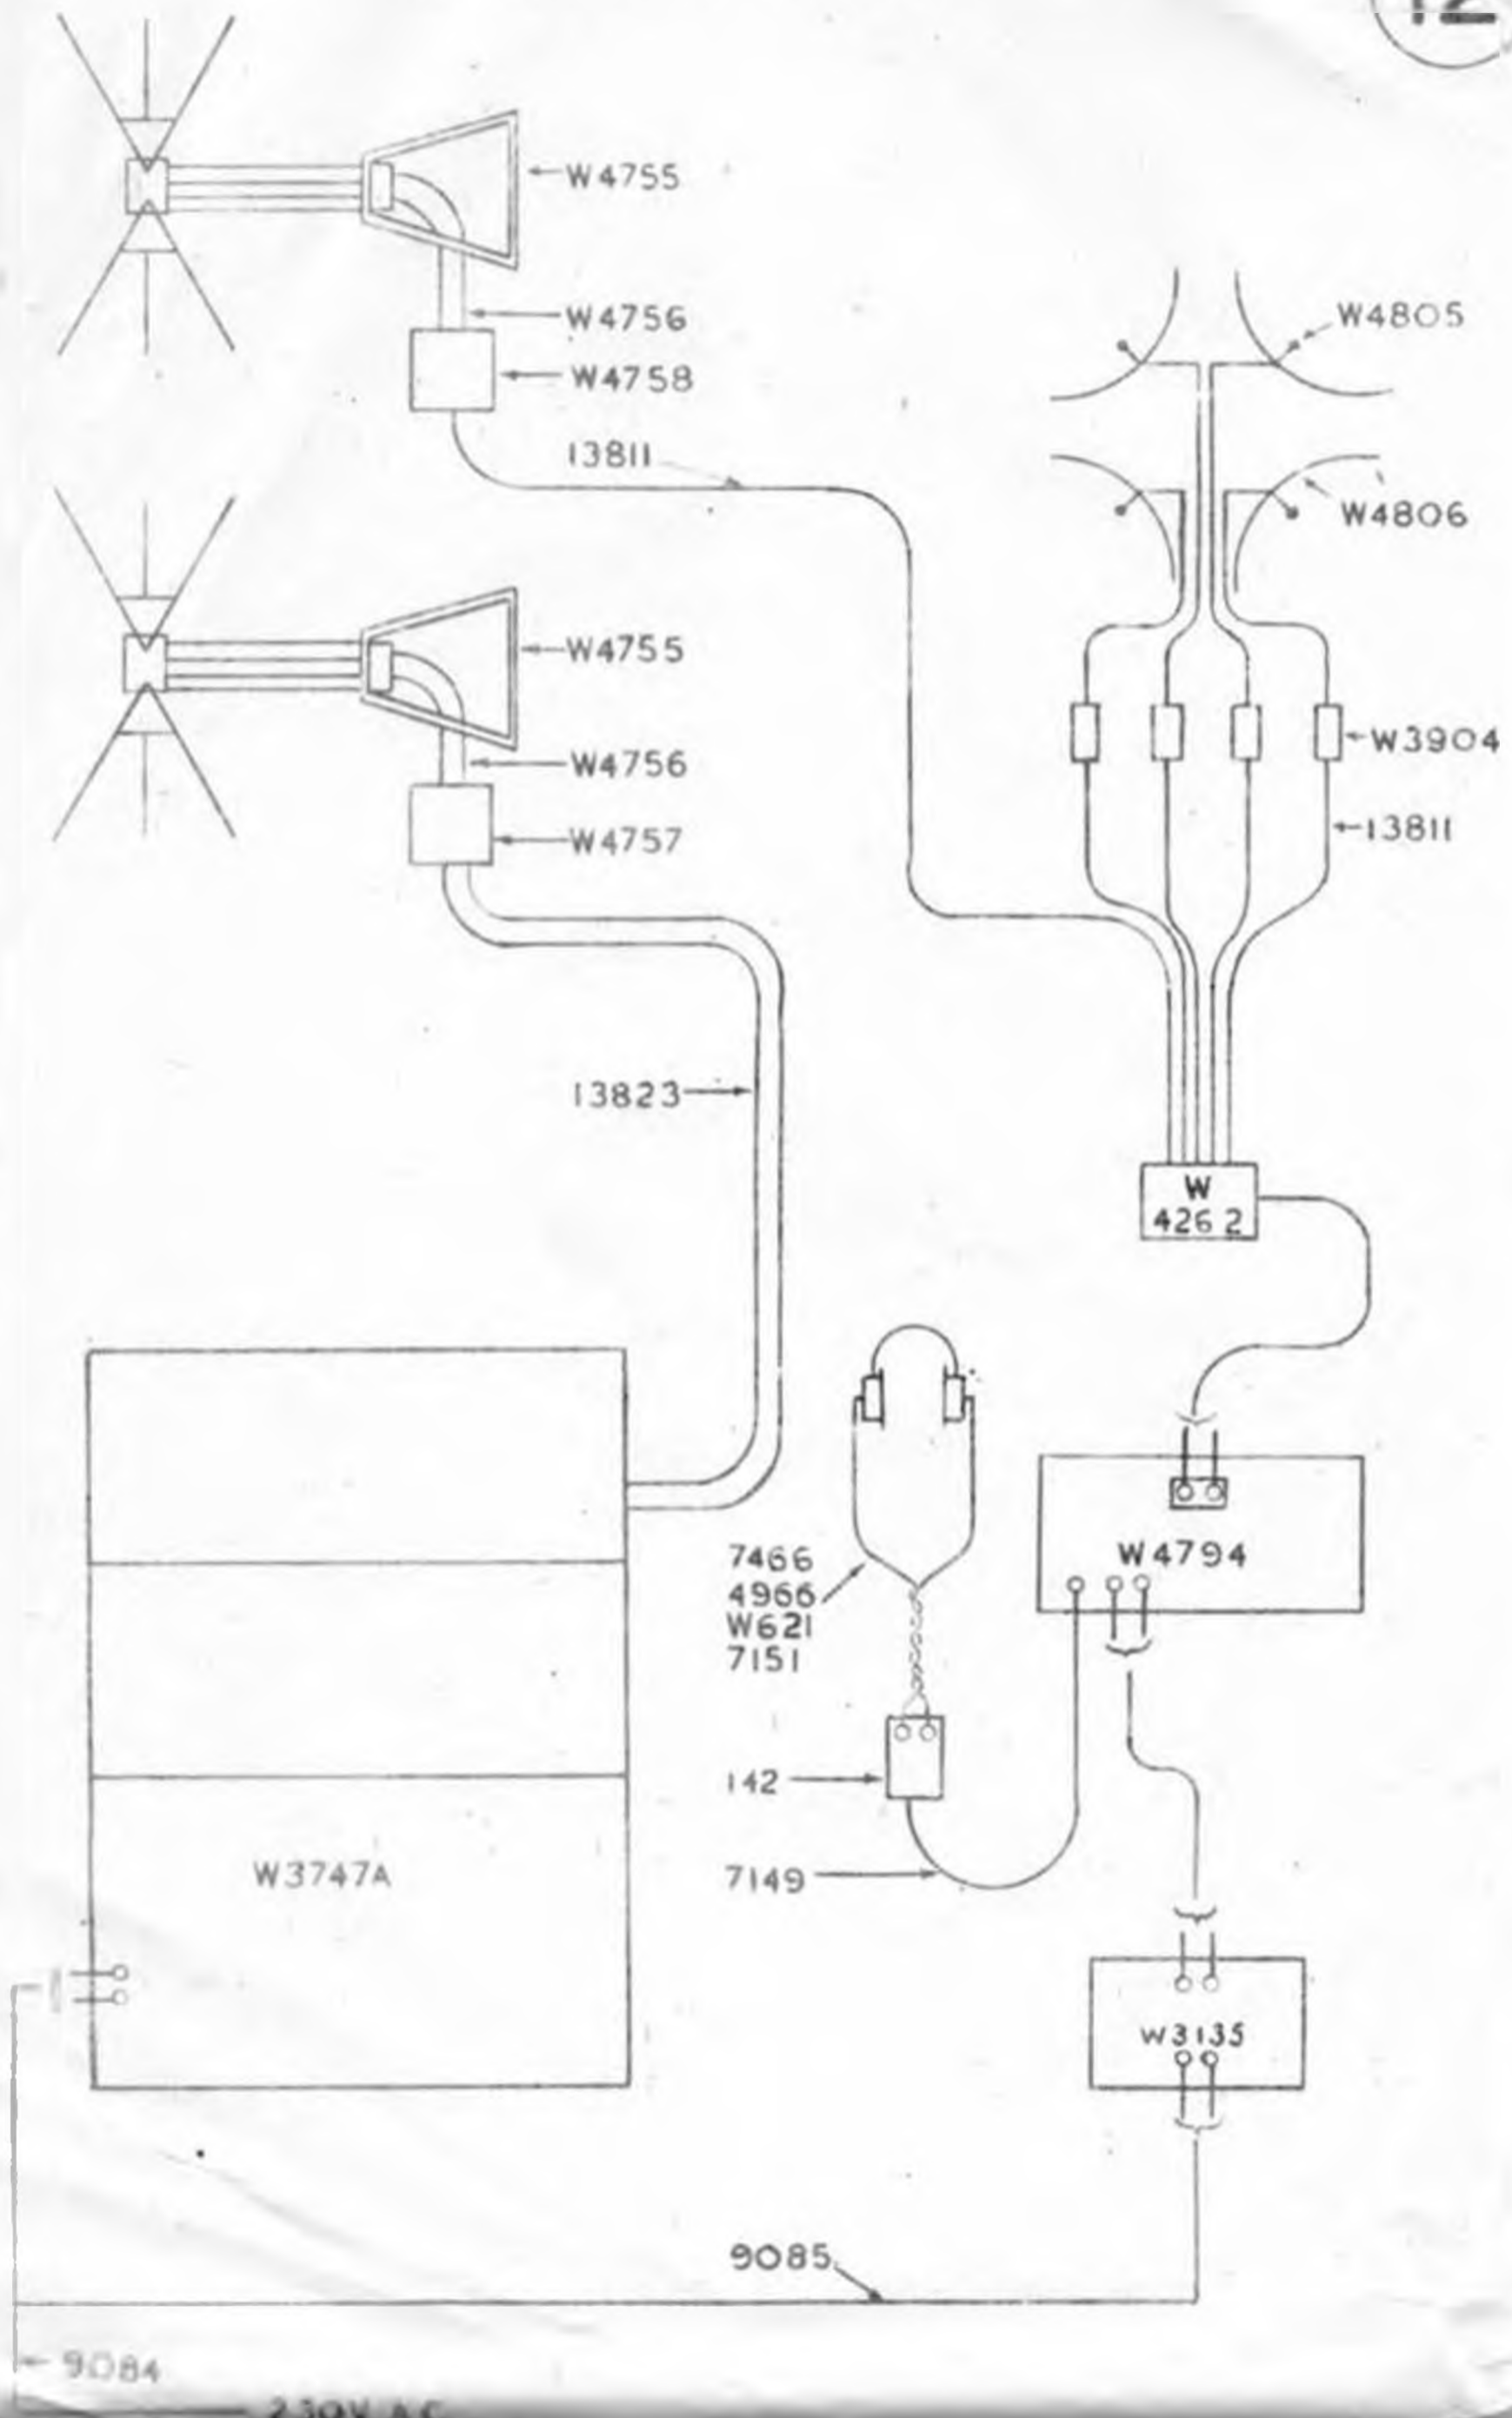

COPY No. 1

410372

THIS BOOK IS INVARIABLY TO BE KEPT LOCKED UP WHEN NOT IN USE AND IS NOT TO BE TAKEN OUTSIDE THE SHIP OR ESTABLISHMENT FOR WHICH IT IS ISSUED WITHOUT THE EXPRESS PERMISSION OF THE COMMANDING OFFICER

**LIBRARY COPY. (M. BOOKS)**

C.B.4226

R

~~NOT REQUIRED FOR PRO  
NIB FOR REF & DISPOSAL~~

HANDBOOK FOR

TYPE 91.

1943

S.—1330X. (Revised—June, 1942.)

H.M.S. ....

Date



Supply  
Receipt  
Acquaint  
~~Destruction~~

Note for S.P. or C.B. Books

(Each class of book is to be shown on a separate form.)

How many copies	Registered numbers of copies	Reference number of book	Date of book	Remarks
1	1	C.B.4226 R	1943	

The above mentioned documents have been supplied to ~~the~~

*Section 8. Signal Dept.*

Signature

*William*

Rank


*Squad Lt Comdr*

When used for Destruction purposes the Certificate overleaf must be completed.

# MODULATION GENERATOR

## INTERIOR VIEW

7

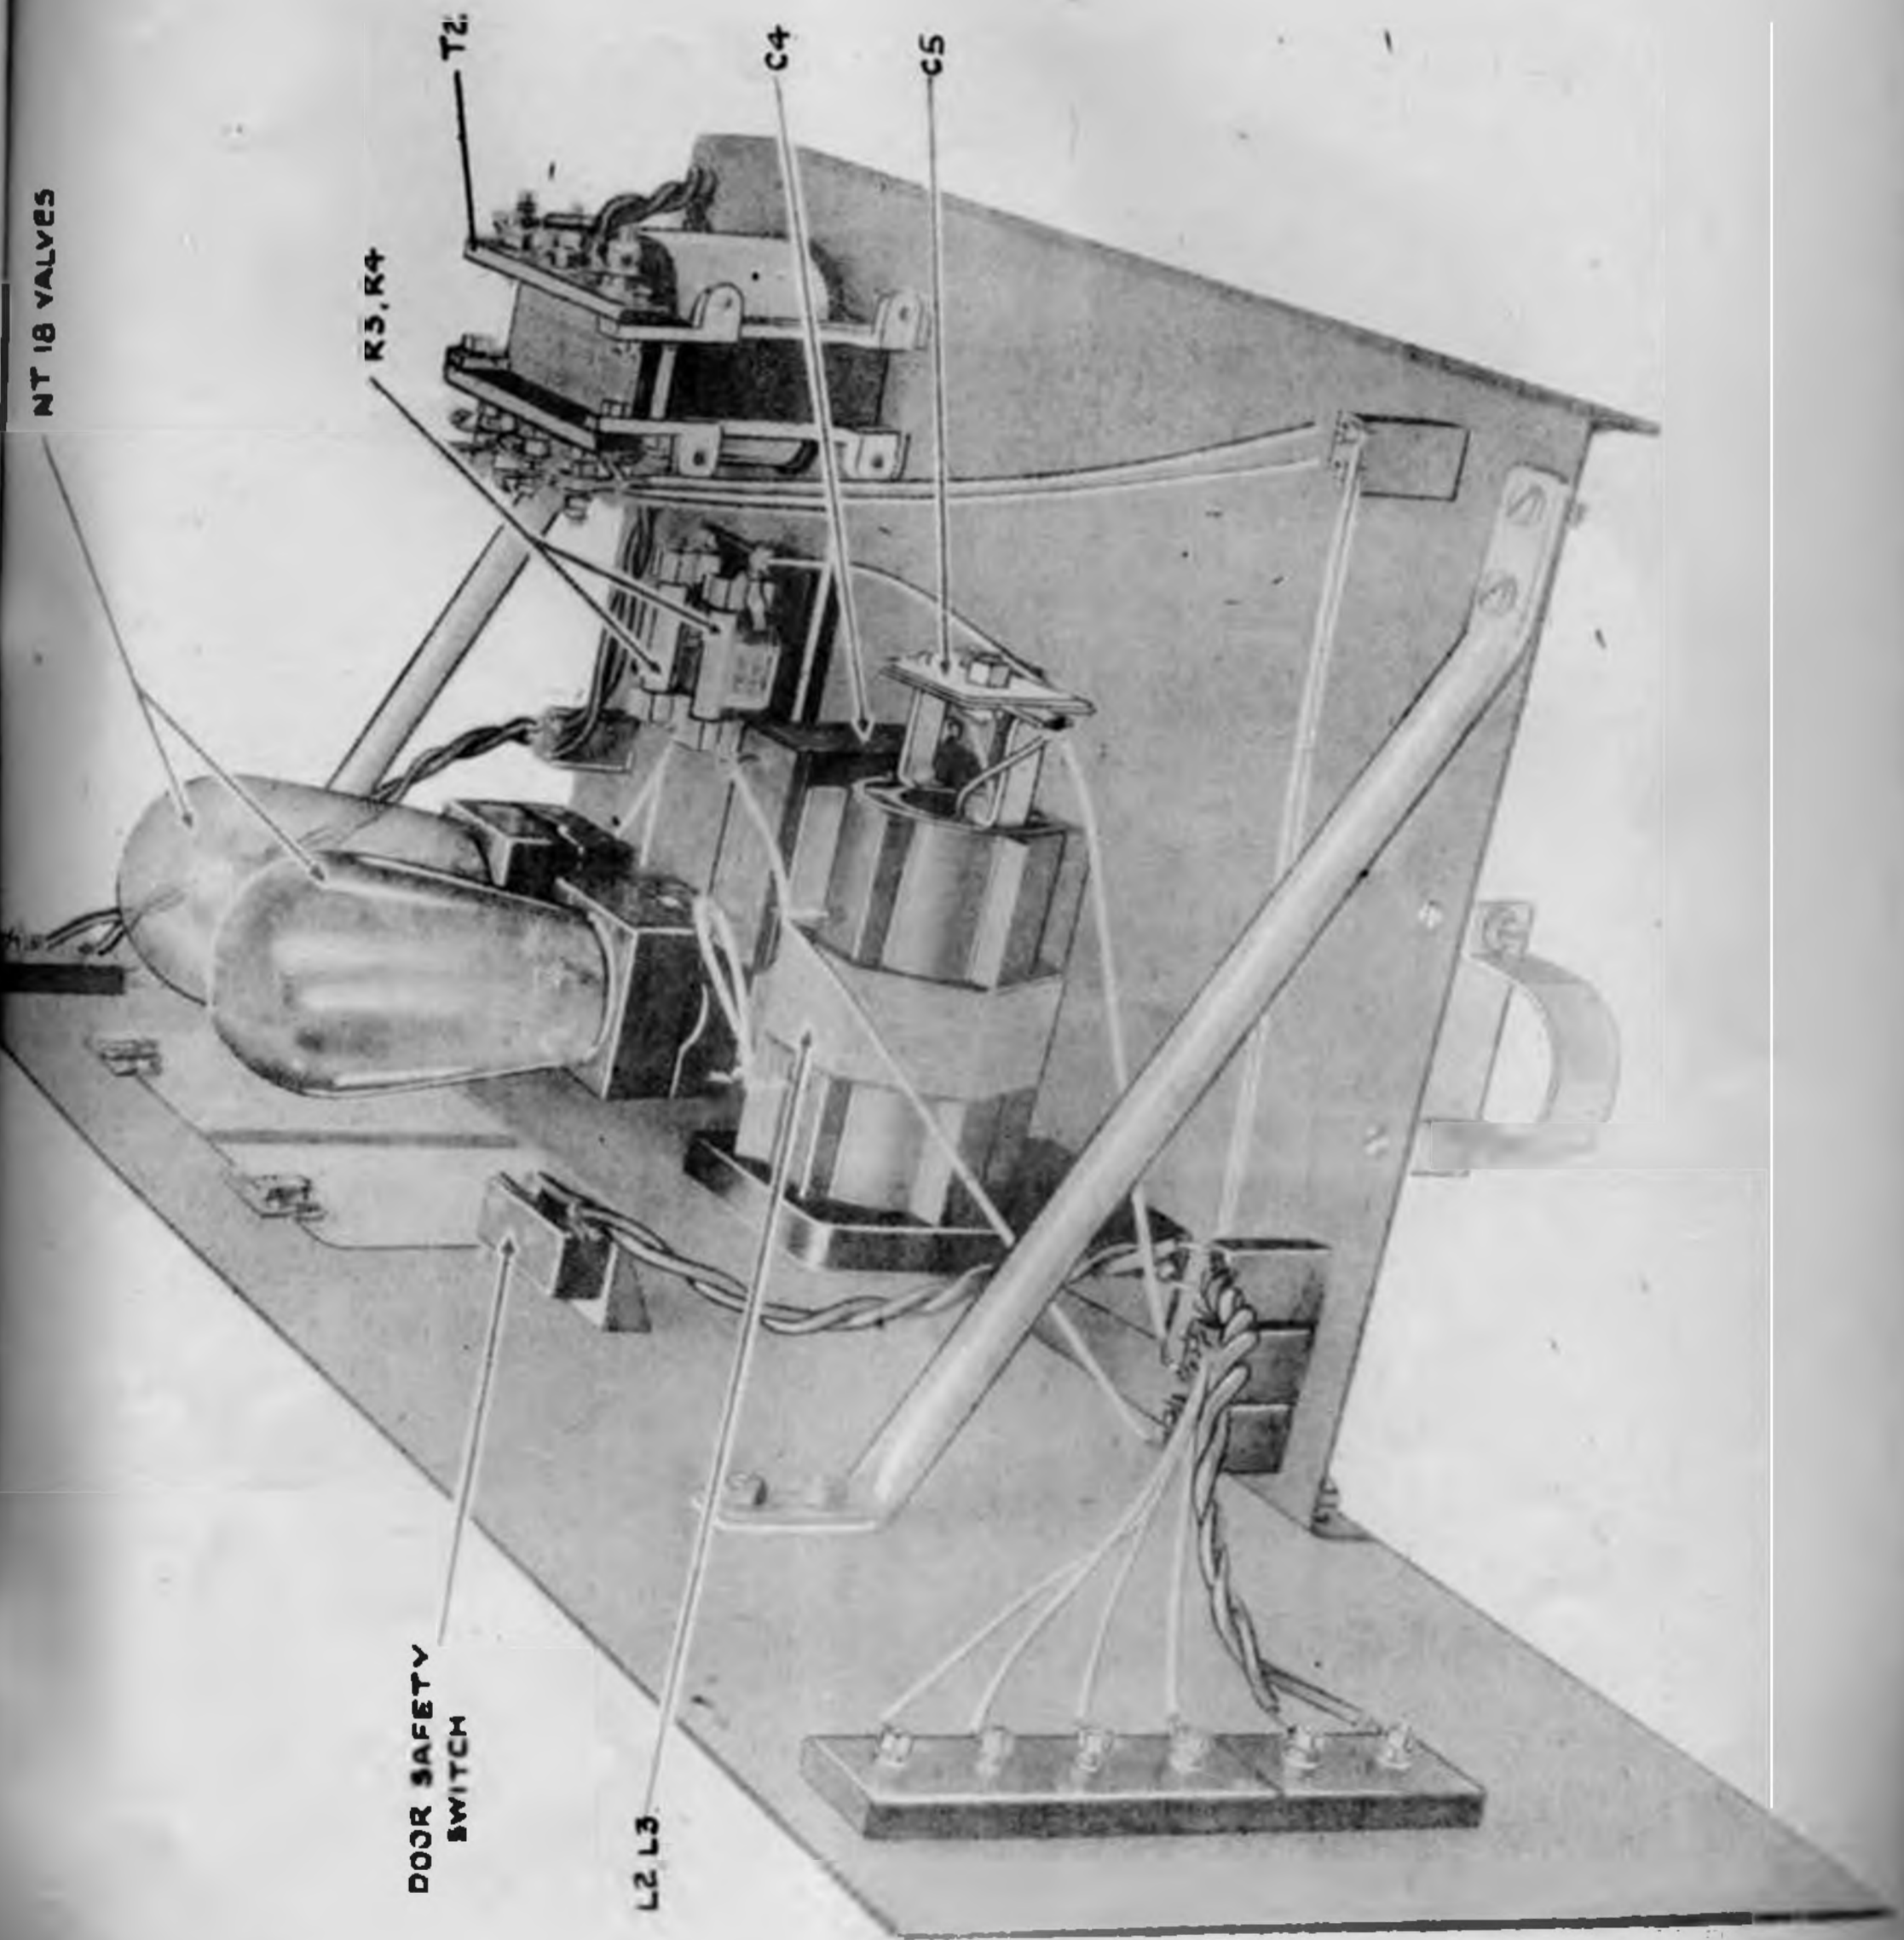

# OSCILLATOR UNIT

## FRONT VIEW

