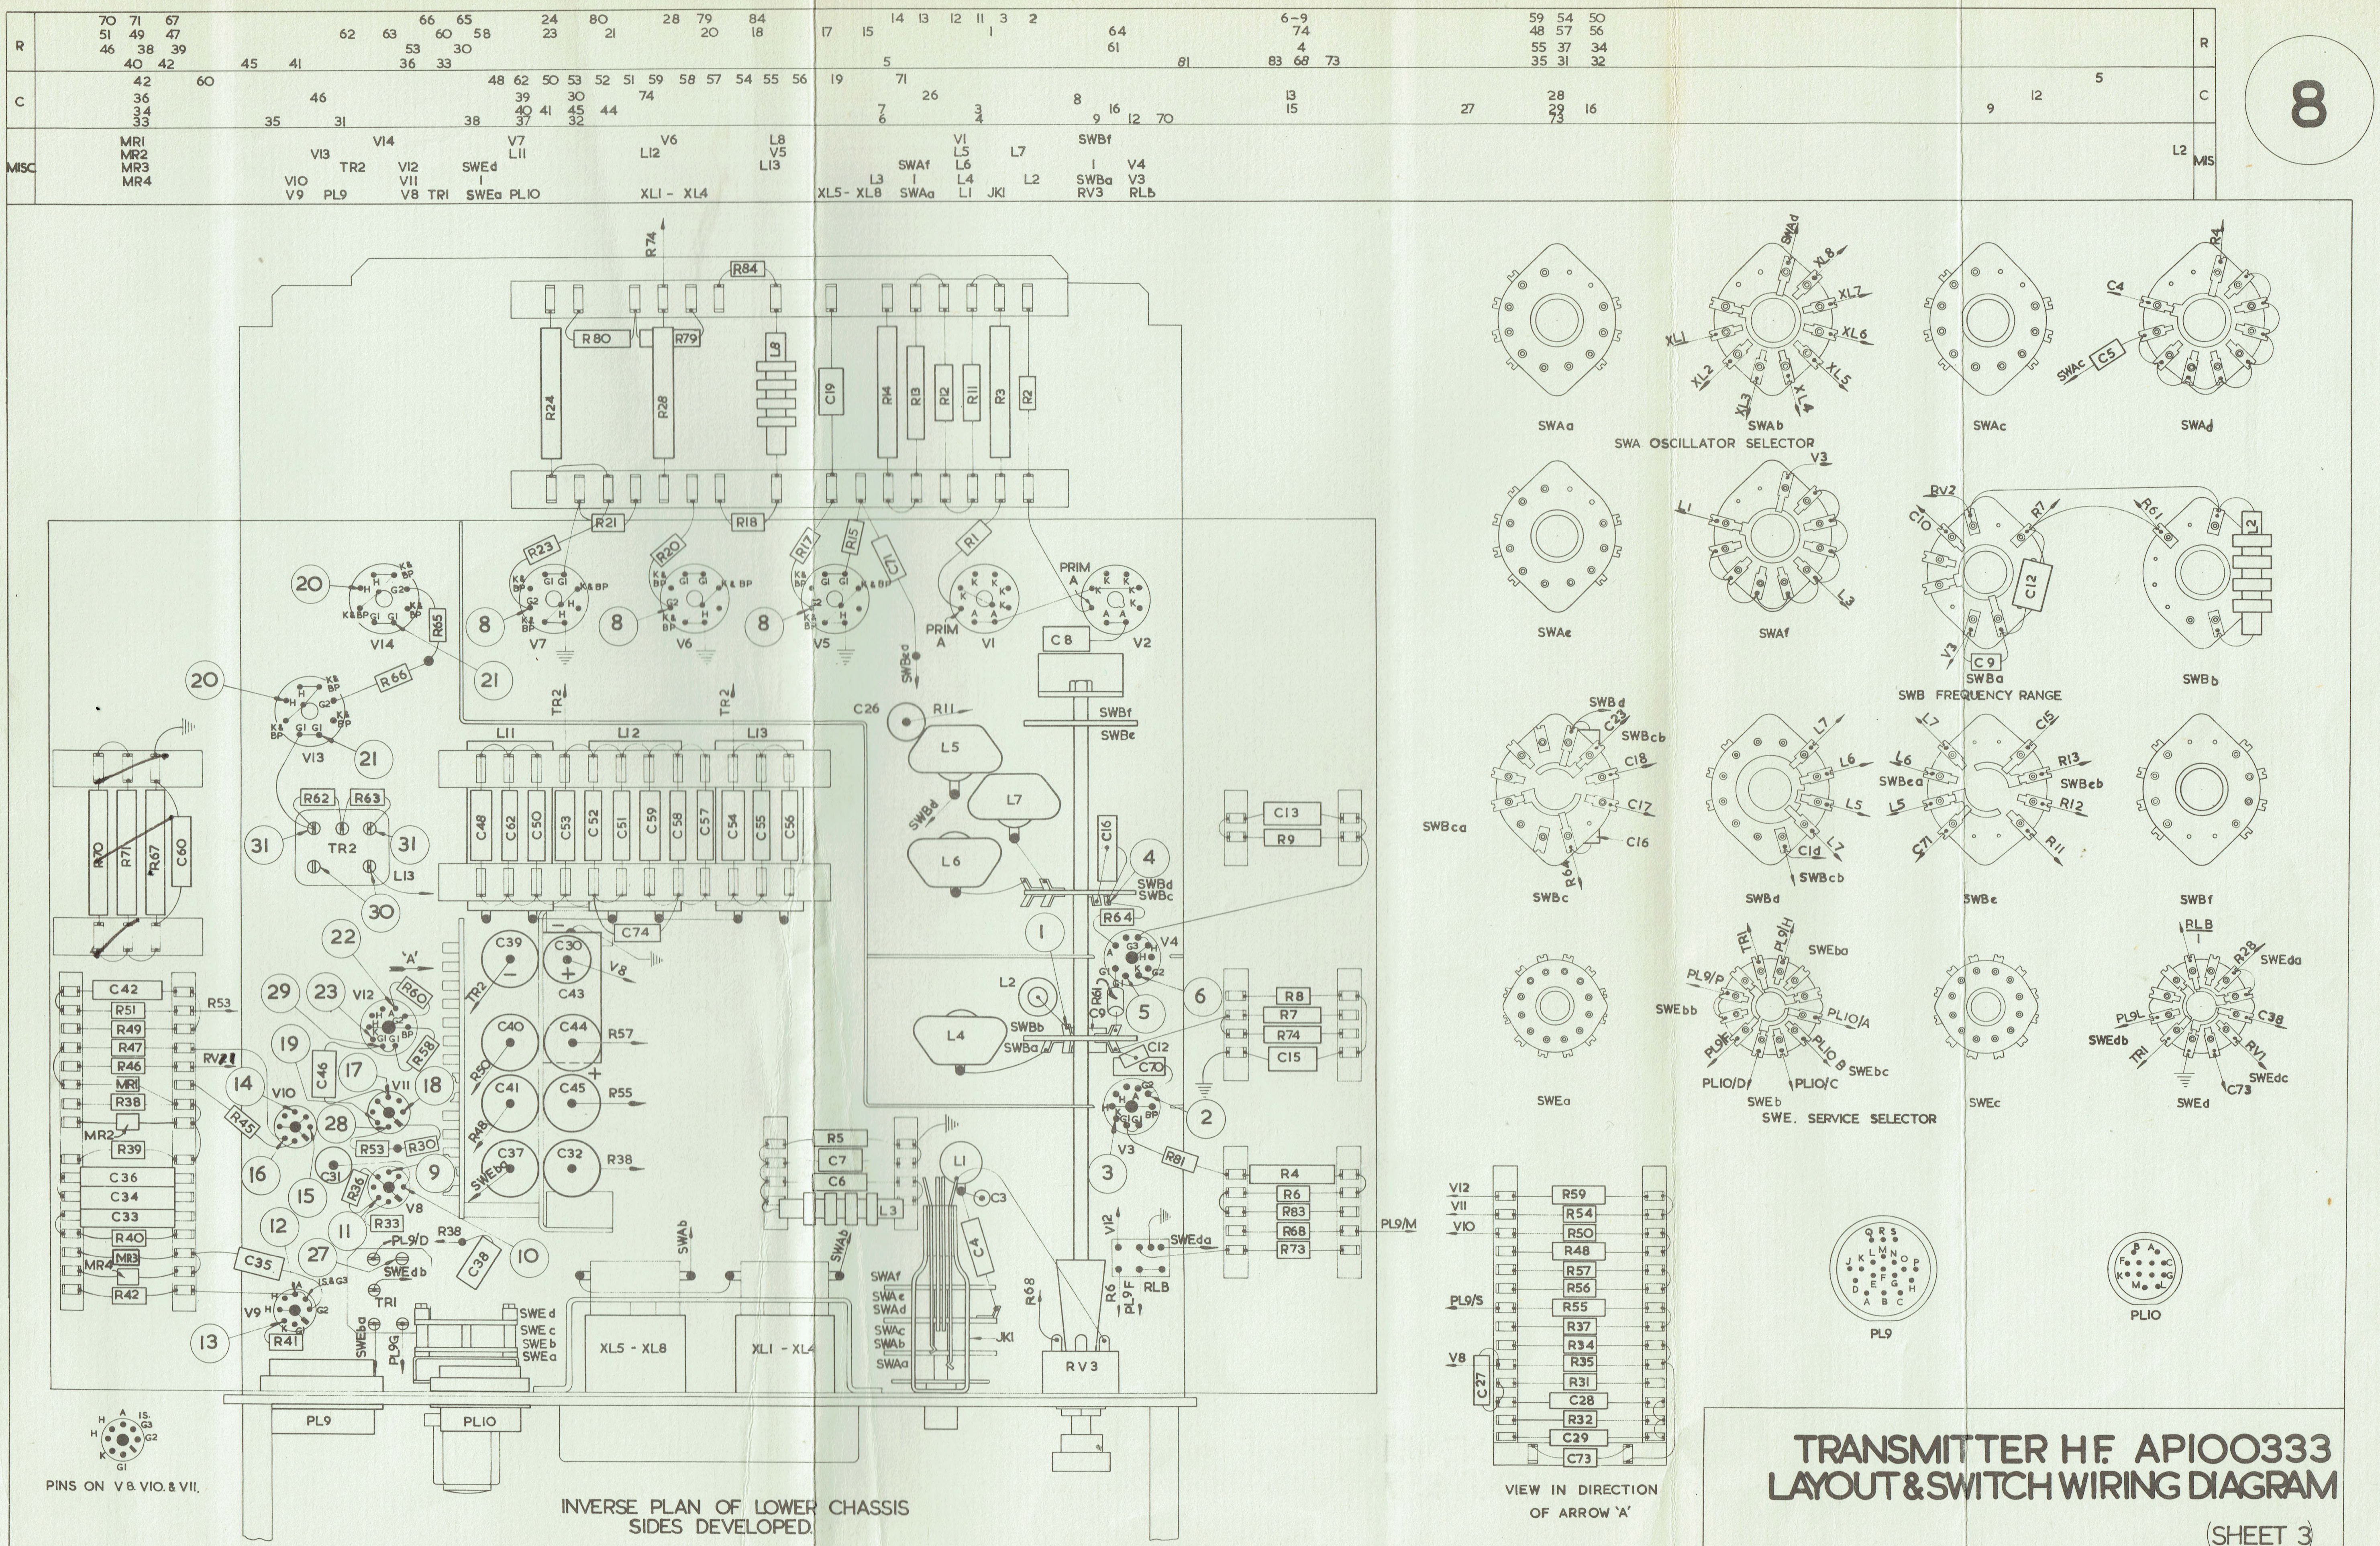

TRANSMITTER H.F. AP100333
LAYOUT & SWITCH WIRING DIAGRAM

(SHEET 3)

NOTE: LOCATE VALVE BASE V4. AMEND ARROW FROM TEST POINT NO 5 NOW LEADING TO G1 TO LEAD TO G2